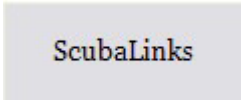
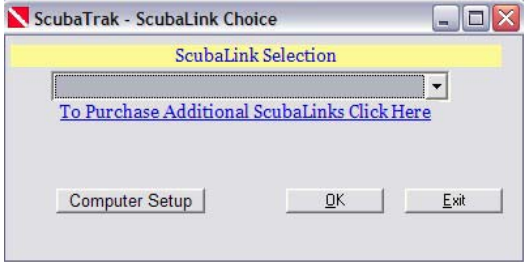


## **“How To”- Set Up Your ReefNet Sensus-Dive Tracker**

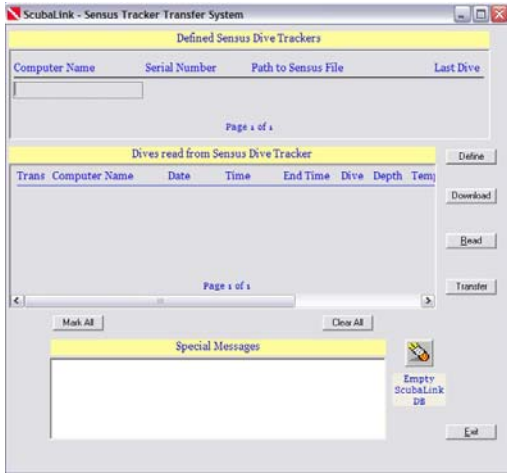
**BEFORE YOU BEGIN PLEASE NOTE:** The ReefNet Sensus Dive Tracker interface is shipped within the program. This set-up is slightly different from other dive computer set-ups. You will need to have the *Sensus Pro Manager* already installed on your computer to continue with this set-up. If you do not, you may download it for free at <http://reefnet.ca/>.

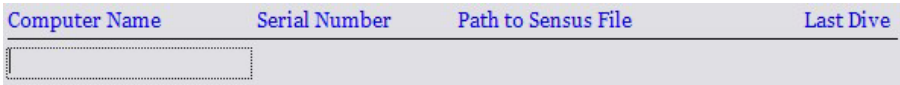
### **ScubaLink Set-Up:**

1. Click  to open this box 

2. Click the drop-down arrow and select/click “ReefNet Sensus” from the menu

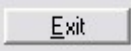


3. This screen will open . In the top-dark grey box, under “Computer Name”, click the right mouse button and select Add.

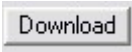
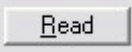
4. 

Computer Name	Serial Number	Path to Sensus File	Last Dive

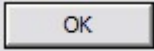
  - ❖ Under “Computer Name” type the serial number of your device as you see it printed on the device. (Ex. sp-55555)
  - ❖ Under “Serial Number” type the same thing.

- ❖ Under “Path to Sensus File” enter “C:\Program Files\ReefNet\SENSUS”. This is the default location for the *Sensus Pro Manager* software. If you loaded your software in a different folder than the default location, enter that location instead of the one above. If you don’t know the location, click the right mouse button on the Sensus software icon and open the “Properties” to find your software location.
  - ❖ Under “Last Dive” enter the number of your last “ScubaTrak” dive number. This acts as the starting point for the information to be transferred into your ScubaTrak.
5. You have finished the set-up. You may now choose to  the “Sensus Tracker Transfer System” screen or continue on to transfer your dive information.

**Transferring Information:**

1. Select (single click) the “Computer Name” field for the device you’ll be transferring data from.
2. Click the  button. This will open your *Sensus Pro Manager* software.
3. Download your dive data as you normally would using your *Sensus Pro Manager* software and Sensus device.
4. When the download has been completed in the Sensus software, return to your ScubaTrak- Sensus Tracker Transfer System screen, and click .

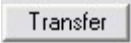


5. In the "Read Sensus Dives" screen mark or check the dives you'd like to create dive log files for and click .

6. The screen will close and the information will be transferred into this screen

Dives read from Sensus Dive Tracker						
Trans	Computer Name	Date	Time	End Time	Dive Depth	Temp
Page 1 of 1						

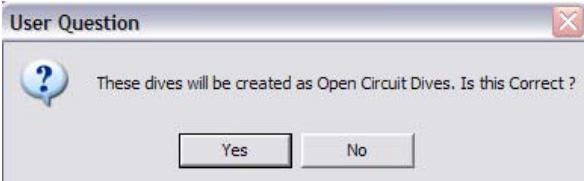
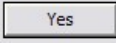
on the Tracker System screen.

7. Click , which will then opened in the Transfer Detail screen

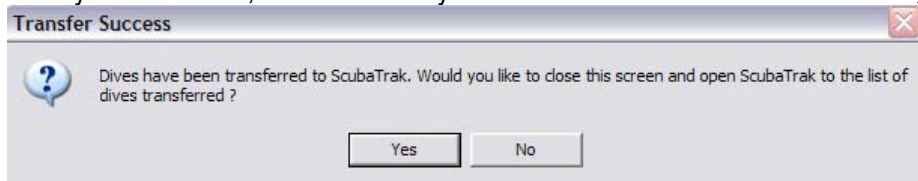


The image shows a window titled "Transfer dives from Sensus stored dives to ScubaTrak". It contains several input fields and checkboxes. The "ScubaTrak starting dive number" and "ScubaTrak ending dive number" are both set to "53". There are checkboxes for "Set Nitrox Mix" (set to 21.00) and "Set Tank Size" (set to 95.0). Below these are radio buttons for "Type of dive" with options "Open Circuit", "Semi Closed (SCR)", and "Closed Circuit (CCR)". There are also dropdown menus for "Location", "Trans", and "Buddy". At the bottom, there is a "System Messages" area and "OK" and "Exit" buttons.

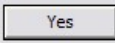
8. Here you can include additional dive details. Click  when you're finished.

9. You'll be asked , click .

10. Then you'll be asked, which will take you from ScubaLink back into ScubaTrak,



The image shows a dialog box titled "Transfer Success". It contains a question: "Dives have been transferred to ScubaTrak. Would you like to close this screen and open ScubaTrak to the list of dives transferred?". There are "Yes" and "No" buttons at the bottom.

- click  to complete the details of your entries in your Dive Detail screen.